

INSTALLATION INSTRUCTIONS

RigidWell Installation Instructions



Preparation

- Review local building codes to ensure compliance.
- Contact Diggers Hotline prior to excavating. NOTE: Homes with Ufer grounding and any improper electrical system grounding void any claims for corrosion. All metal products must be isolated from stray electrical current.
- Ensure faucets, downspouts, sprinklers, and hoses are at least 10' from the well and are aimed away from the well.
- Excavate a hole that is 12" wider than the well in all directions and 10" below the bottom edge of the window.

Installation

1. Mark the location of the top mounting holes on the foundation:
 - For the 42" width model, holes should be 44" apart, center to center.
 - For the 50" width model, holes should be 52" apart, center to center.
 - For the 67" width model, holes should be 69" apart, center to center.
2. Drill two holes on the markings and remove all concrete dust from the holes before proceeding.
3. Place your hardware in the hole and place the well on the anchor. Add a 1" flat washer and nut and tighten into place.
4. Using the remaining flange holes, drill the foundation wall at 12" centers minimum to assure structural stability.
5. Place the remaining hardware into the holes, add 1" flat washers and nuts, and tighten into place. Connect the window well drain into the foundation drainage system.
6. Using hand tools only, backfill around the well in 12" of washed stone. Failure to fill the well based on 12" of rock decreases the integrity of the well and will void the manufacturer's warranty.
7. An egress ladder is required by code for wells 48" and higher. To prevent pests, debris, and falls into the window well, a cover should be used. Ladder and cover sold separately.

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.