



Cover Locks Installation Instructions

Included in kit:

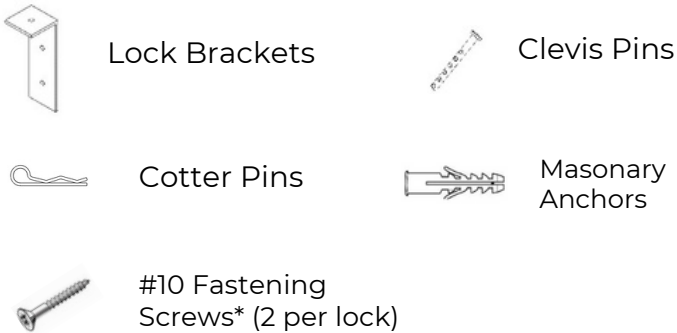


What you will need:

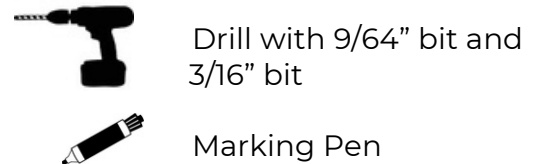


Installation:


STEP 1: From inside the window well, align the Lock Bracket so that the top of the bracket is flush with the bottom surface of the polycarbonate cover.

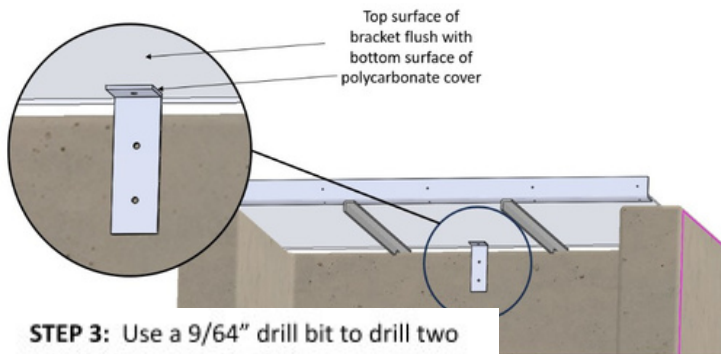


STEP 3: Use a 9/64" drill bit to drill two pilot holes in marked locations. Fasten the Lock Bracket to the well using appropriate #10-24 screws.

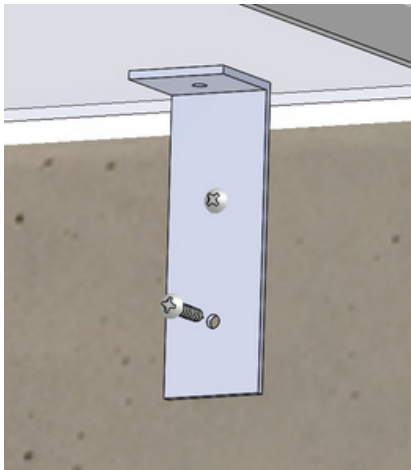


STEP 2: Use the marking pen to mark two bracket hole locations on well.

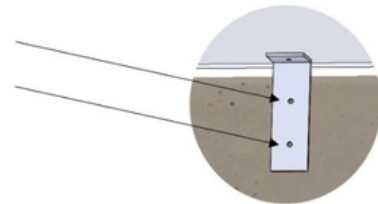


STEP 4: From top side of cover, drill a 3/16" hole into the polycarbonate cover that aligns with the top hole in the Lock Bracket

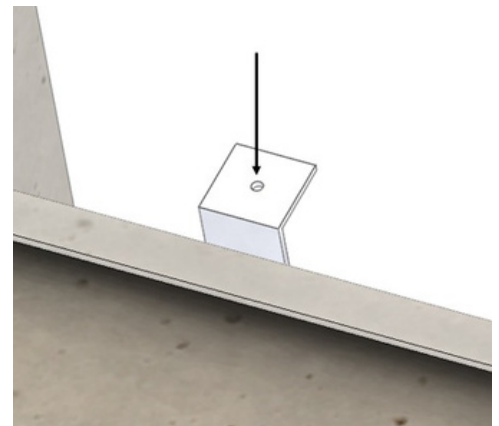

STEP 5: Insert clevis pin through top side of cover, into the Lock Bracket.

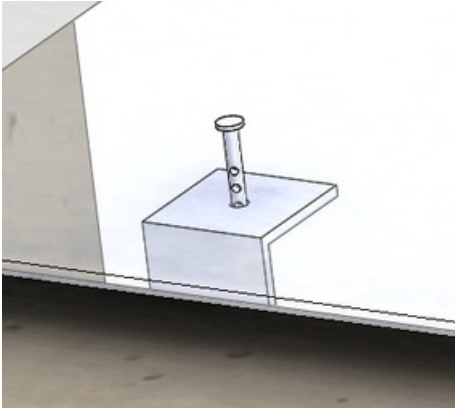

STEP 6: From inside the window well, insert cotter pin through clevis pin to secure lock.

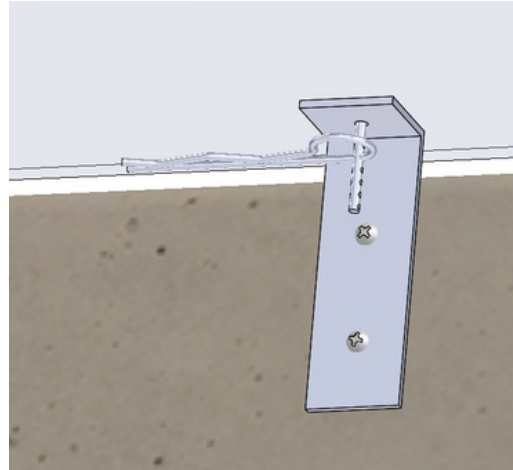

STEP 7: Repeat steps 1-6 with the remaining locks. Be sure to use all locks provided and space them evenly. This will ensure that the polycarbonate cover cannot be flexed enough to allow access to the lock from outside of the cover.