


Adhesive Back Panel Installation Instructions

Included in kit:

Window Well Cover with adhesive tape and foam gasket pre assembled onto back bar

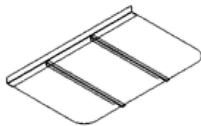

Back Panel




Note: If back panel was ordered separate from cover, foam gasket and adhesive tape will not be pre-assembled. To install, follow the *stand alone installation* instructions below.

Installation


STEP 1: Remove protective film from both sides of back panel and top side of well cover.

Step 2: Align the left side "L" and right side "R" of back panel with the left side "L" and right side "R" of well cover.

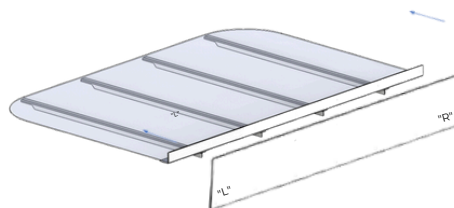

STEP 3: Remove backing from adhesive tape.


STEP 4: Adhere adhesive tape of the back panel to the well cover. Apply pressure to full length of back panel to create a secure adhesion.

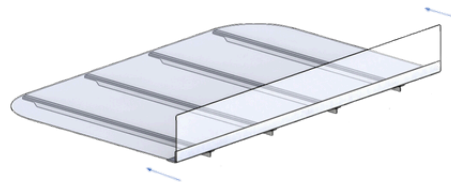


STEP 5: Continue with Window Well Cover installation to well. (See separate installation instructions)

Stand Alone Installation:

STEP 1: Remove backing from foam gasket, align with back support of cover and apply pressure to secure gasket to back support. (Foam gasket must be flush with the **top** of the back support)

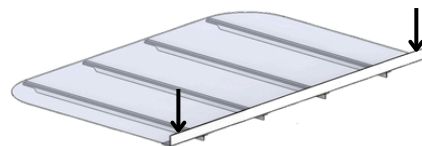

STEP 2: Remove backing from one side of the adhesive strip, align with back support of the cover and secure adhesive to the back support. (Adhesive strip must be flush with the **bottom** of the back support).

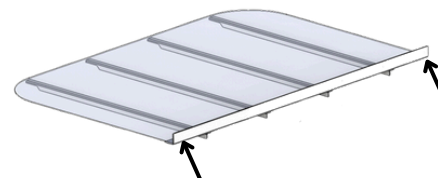

STEP 3: Align back panel with back support and apply pressure to full length of back panel to create a secure adhesion.

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00AM – 5:00PM CST at (262) 633-3707.