


## Adhesive Back Panel With Clips Installation Instructions

### Included in kit:

Window Well Cover with adhesive tape and foam gasket pre assembled onto back bar

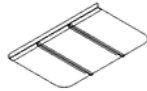

Back Panel



Quick-release Clips



#8 x 0.75"

Phillips sheet metal screws



Masonry Anchors



### For installation to concrete or brick:

Phillips Screwdriver



Drill



Hammer



3/16" Masonry drill bit




**Note:** If back panel was ordered separate from cover, foam gasket and adhesive tape will not be pre-assembled. To install, follow the *stand alone installation* instructions below.

### Installation:


**STEP 1:** Remove protective film from both sides of back panel and top side of well cover.

**Step 2:** Align the left side "L" and right side "R" of back panel with the left side "L" and right side "R" of well cover.

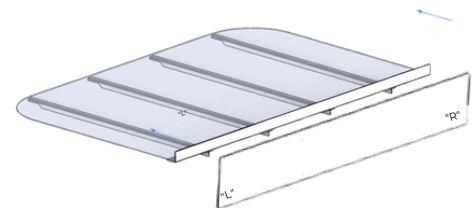

**STEP 3:** Remove backing from adhesive tape.


**STEP 4:** Adhere adhesive tape of the back panel to the well cover. Apply pressure to full length of back panel to create a secure adhesion.

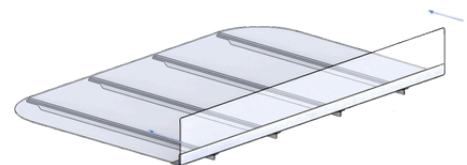

**STEP 5:** Continue with Window Well Cover installation to well. (See separate installation instructions)

**Note: Step 5 must be completed before moving on to step 6**


**Step 6:** Quick-release clips are provided to secure the back panel to the house. Flip the quick-release clips to the open position and align with the side of the back panel. Mark both clip hole locations and use screws provided to attach clip to house. Repeat clip installation on opposite side. Once clips are installed, flip the quick-release clips to closed position.

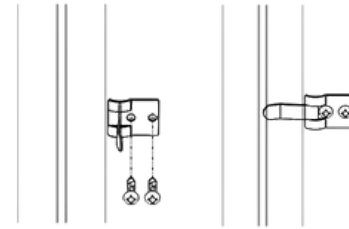


**Note:** If assembling quick-release clips to concrete or brick, use a 3/16" masonry bit to drill each clip hole to a 1½" depth. Use a hammer to insert masonry anchors provided and then screw the clips into the anchors in the concrete/brick.

### Stand Alone Installation:

**STEP 1:** Remove backing from foam gasket, align with back support of cover and apply pressure to secure gasket to back support. (Foam gasket must be flush with the **top** of the back support)

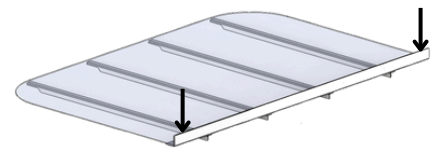

**STEP 2:** Remove backing from one side of the adhesive strip, align with back support of the cover and secure adhesive to the back support. (Adhesive strip must be flush with the **bottom** of the back support).

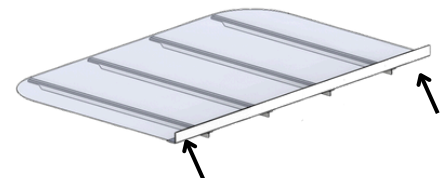

**STEP 3:** Align back panel with back support and apply pressure to full length of back panel to create a secure adhesion.