

Screw Mount Back Panel Installation Instructions

NOTE: TO PREVENT DAMAGE DURING INSTALLATION, DO NOT REMOVE PROTECTIVE FILM FROM COVER UNTIL INSTALLATION IS COMPLETE. RETURNS CANNOT BE ACCEPTED ONCE PROTECTIVE FILM HAS BEEN REMOVED.

Included in kit:



Cover assembly



Philips panhead screws



Back Panel


What you will need:

Philips Screwdriver




Installation:


STEP 1: Remove all panhead screws from back bar and set aside.

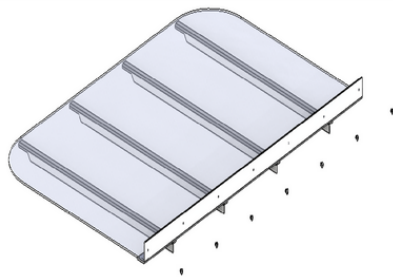

Step 2: Align the left side "L" and right side "R" of back panel with the left side "L" and right side "R" of well cover.

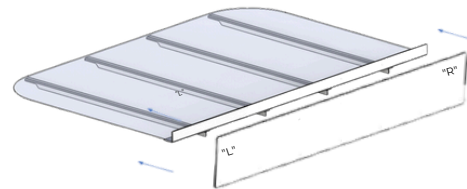

STEP 3: Align slots in back panel with holes in back bar and secure with screws from STEP 1.

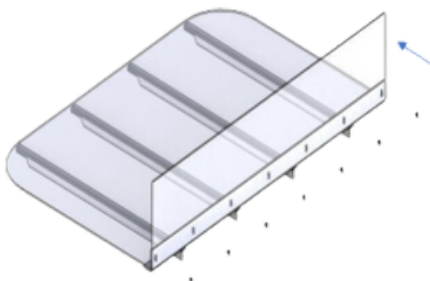

STEP 4: Continue with Window Well Cover installation. (See separate installation instructions)

For questions, please call Window Well Supply
Customer Service, Monday through Friday,
8:00AM – 5:00PM CST at (262) 633-3707.