


INSTALLATION INSTRUCTIONS


Polycarbonate Window Well Cover Installation

Flat and sloped covers for metal wells.

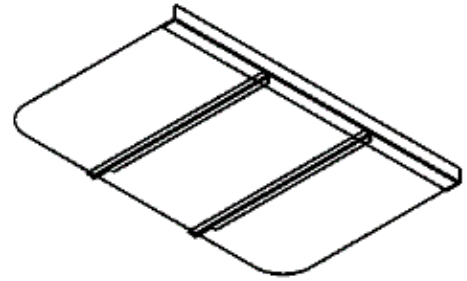

NOTE: To prevent damage during installation, do not remove the protective film from the cover until installation is complete. Returns cannot be accepted once the protective film has been removed.


Included in Kit




Cover assembly



#8-32 × 1/2" Phillips panhead screws



#8 flat washers



Well clips



#8 nylon lock nuts


What You'll Need

- Drill with 3/16" bit
- Phillips screwdriver
- Permanent marker

Installation

STEP 1:


Position cover assembly over window well. Ensure that the cover assembly is centered on the window well and that the back of the assembly is snug against the house/building.

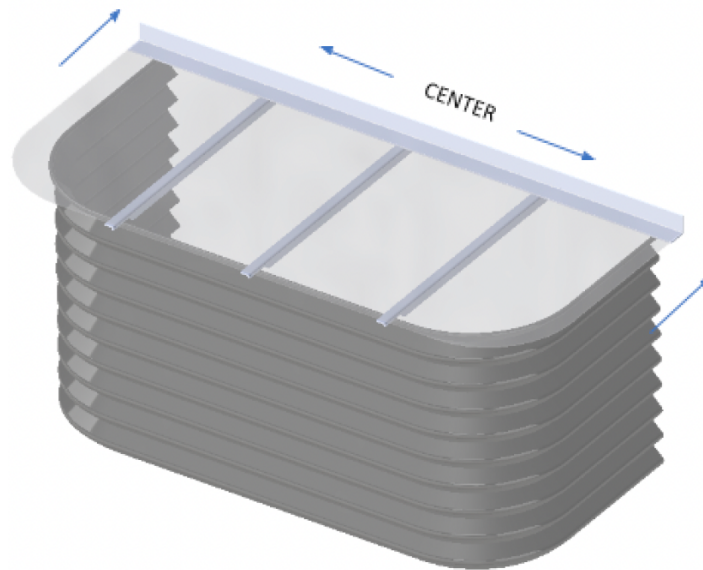

NOTE: Before drilling holes, count the number of clips provided with your cover and drill only enough holes for the number of clips provided.


STEP 2:

Using a permanent marker, mark on the protective film to locate the center of the window well lip at each clip location. Approximate clip locations have been indicated on each cover.

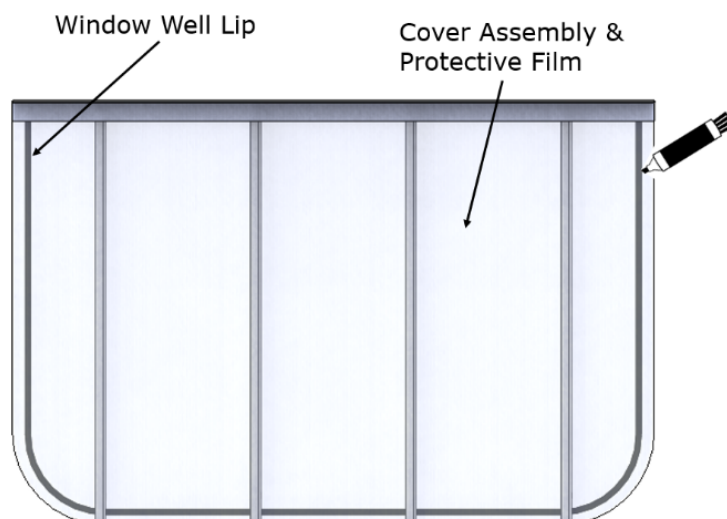


STEP 3:

Shift the cover slightly from its current position in order to drill holes. Drill a 3/16" hole at each marker location made in STEP 2.

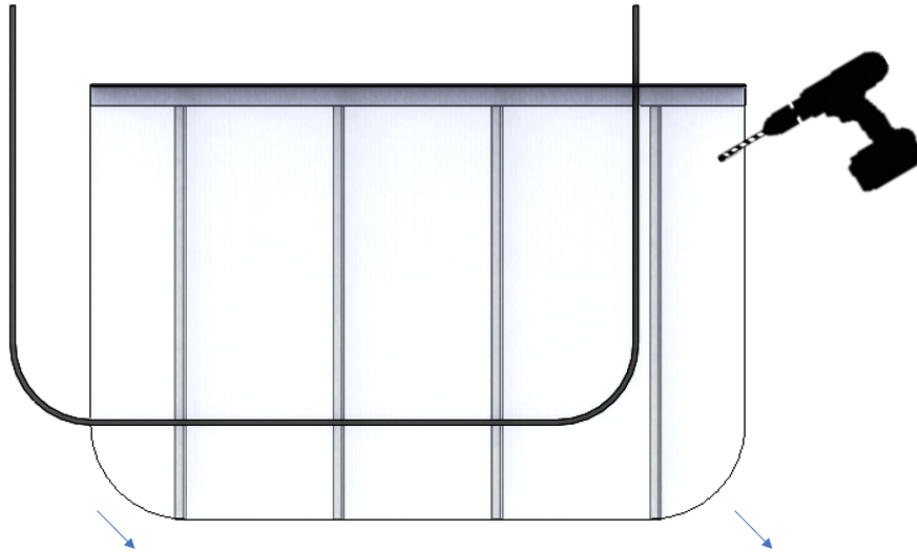
**STEP 4:**

At each hole location, insert a #8-32 x 1/2" Phillips pan head screw through the bottom side of the well clip and up through the bottom side of the cover assembly. Secure with a lock nut and flat washer on the top side of the cover. Use a Phillips screwdriver to tighten.

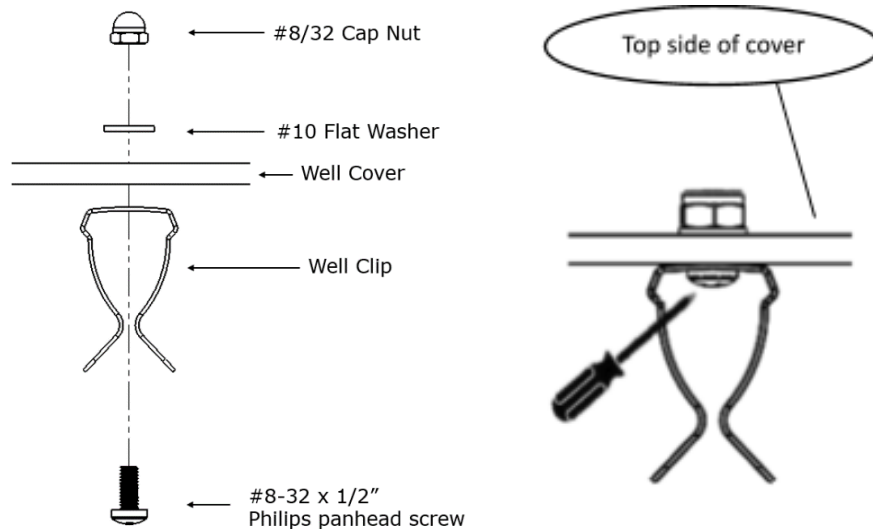

STEP 5:

Attach the cover assembly to the window well by snapping the clips onto the lip of the window well. Remove the protective film and discard.

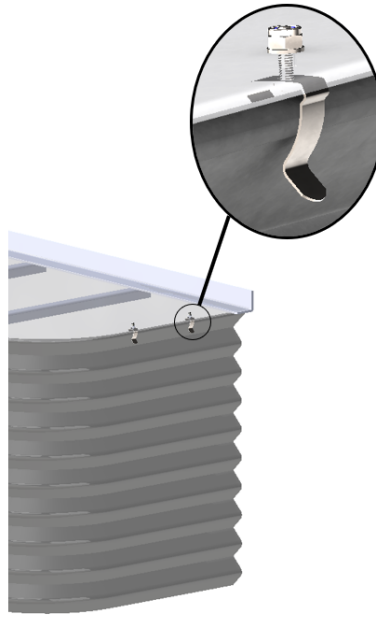**Your window well cover installation is now complete!**

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.

REV A.9