

INSTALLATION INSTRUCTIONS

Steelway KD Cellar Door with Extension

Included Hardware

- (11) 1/4"-20 × 1/2" bolts
- (11) #12 × 1-1/4" screws
- (11) 1/4"-20 nuts
- (11) Plastic anchors

Assembly

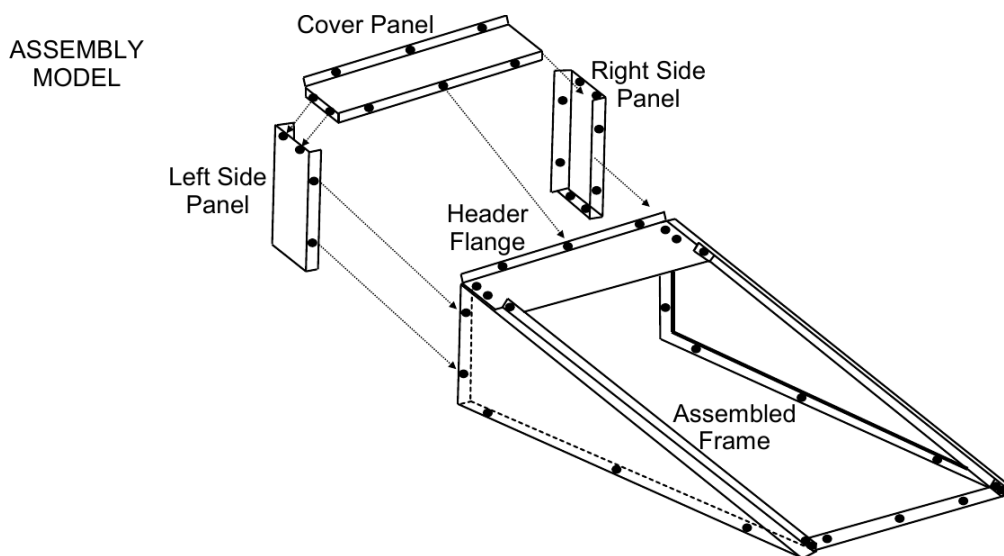
Add the extension to the assembled frame, then follow the KD Cellar Door installation instructions.

STEP 1:

Position the side panel with the open end facing up (see model). The wide flange will be against the building during installation. Attach the front flange to the back of the assembled frame using the 1/4"-20 × 1/2" bolts and nuts. **Repeat Step 1 for the second side.**

STEP 2:

Place the cover panel so it overlaps the side panels and header flange. Attach the pieces using the 1/4"-20 × 1/2" bolts and nuts, with the bolt heads facing out.

**Your Steelway cellar door extension is now installed!**

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.