

INSTALLATION INSTRUCTIONS

Adhesive Back Panel Installation Instructions

Standard & With Quick-Release Clips**Included in Kit**

Window Well Cover with
adhesive tape and foam gasket
pre-assembled onto back bar



Back panel

With the quick-release clips version, also included:

Quick-release clips



#8 × 0.75" Philips sheet metal screws



Masonry anchors

What You'll Need

No tools are required for the standard adhesive back panel.

For the clips version, if installing to concrete or brick:

Phillips screwdriver



Drill



Hammer



3/16" masonry drill bit

Note: If the back panel was ordered separate from the cover, the foam gasket and adhesive tape will not be pre-assembled. To install, follow the Stand-Alone Installation instructions below.


Installation

STEP 1:

Remove the protective film from both sides of the back panel and the top side of the well cover.

STEP 2:

Align the left side “L” and right side “R” of the back panel with the left side “L” and right side “R” of the well cover.

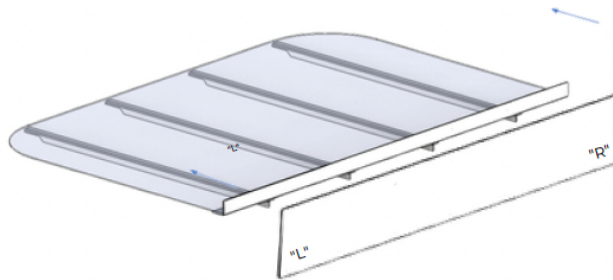


STEP 3:

Remove the backing from the adhesive tape.

STEP 4:

Adhere the adhesive tape of the back panel to the well cover. Apply pressure to the full length of the back panel to create a secure adhesion.

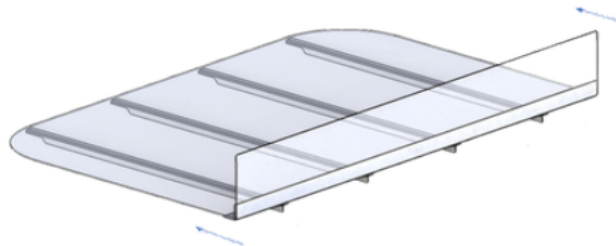

STEP 5:

Continue with Window Well Cover installation to the well. (See separate installation instructions.)

Adding Quick-Release Clips


Complete this section only if your kit includes quick-release clips.

Note: STEP 5 must be completed before adding the quick-release clips.

STEP 6:

Quick-release clips are provided to secure the back panel to the house. Flip the quick-release clips to the open position and align with the side of the back panel. Mark both clip hole locations and use the screws provided to attach the clip to the house. Repeat clip installation on the opposite side. Once the clips are installed, flip the quick-release clips to the closed position.

Note: If assembling the quick-release clips to concrete or brick, use a 3/16" masonry bit to drill each clip hole to a 1½" depth. Use a hammer to insert the masonry anchors provided, then screw the clips into the anchors in the concrete/brick.

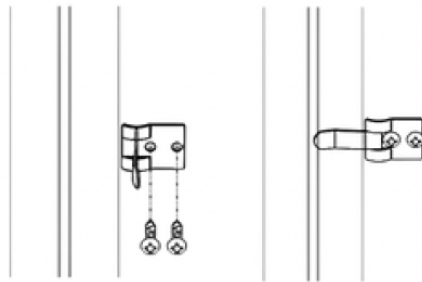


Stand-Alone Installation

Use these steps if the back panel was ordered separately (foam gasket and adhesive tape not pre-assembled).

STEP 1:

Remove the backing from the foam gasket, align with the back support of the cover and apply pressure to secure the gasket to the back support. (The foam gasket must be flush with the top of the back support.)

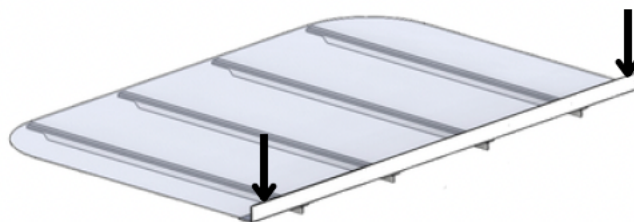


STEP 2:

Remove the backing from one side of the adhesive strip, align with the back support of the cover and secure the adhesive to the back support. (The adhesive strip must be flush with the bottom of the back support.)

STEP 3:

Align the back panel with the back support and apply pressure to the full length of the back panel to create a secure adhesion.

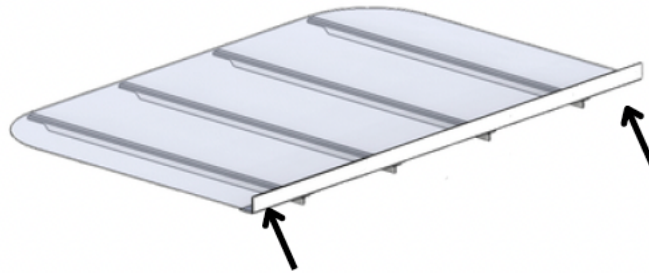**Your back panel installation is now complete!**

For questions, please call Window Well Supply Customer Service, Monday through Friday,
8:00 AM – 5:00 PM CST at (262) 633-3707.