


INSTALLATION INSTRUCTIONS

Window Well Atrium Installation Instructions

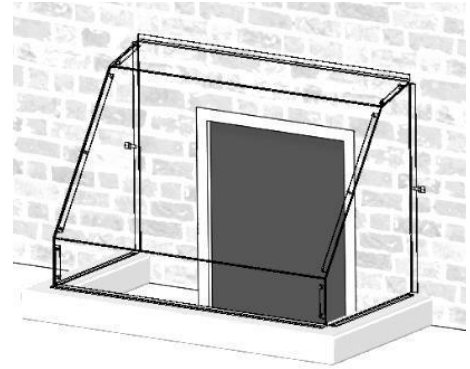

NOTE: To prevent damage during installation, do not remove the protective film from the cover until installation is complete. Returns cannot be accepted once the protective film has been removed.

Included in Kit



Atrium left panel




Atrium right panel



Atrium front panel



#8/32 × 0.75" Phillips pan head screws, flat washers, and nylon-insert nuts

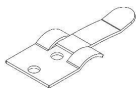

Quick release clips



Masonry anchors

What You'll Need


- Drill
- Phillips screwdriver
- Marker

For installation to a concrete or brick wall, you will also need:

- 3/16" masonry drill bit
- Hammer


Installation

Step 1: Assemble the left and right panels to the front panel using the screws, washers, and nylon-insert nuts provided. Ensure that the vertical flanges on each side panel are facing outward.

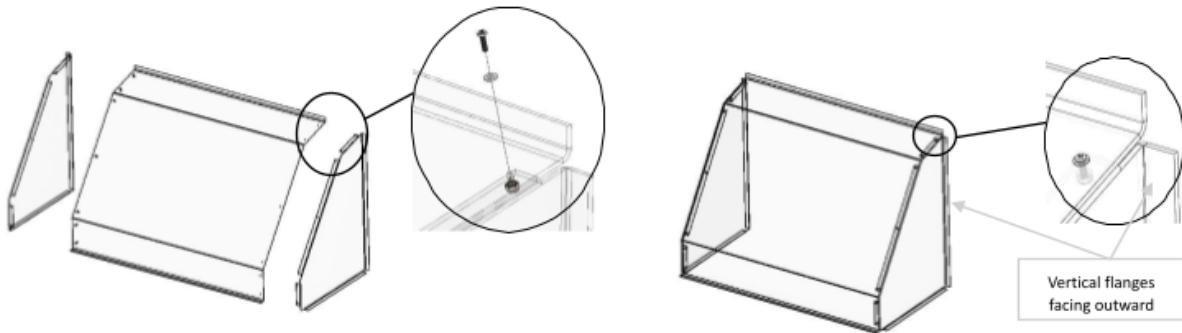

Step 2: Center the atrium on the well. Flip the quick-connect clip to the open position and align it with the atrium side flange, near the center of the flange. Mark both clip hole locations and use the screws provided to attach the clip to the wall. Repeat clip installation on the opposite side.

If assembling the clip to concrete or brick, use a 3/16" masonry bit to drill each clip hole to a 1½" depth. Use a hammer to insert the masonry anchors provided, then screw the clips to the anchors in the concrete or brick.

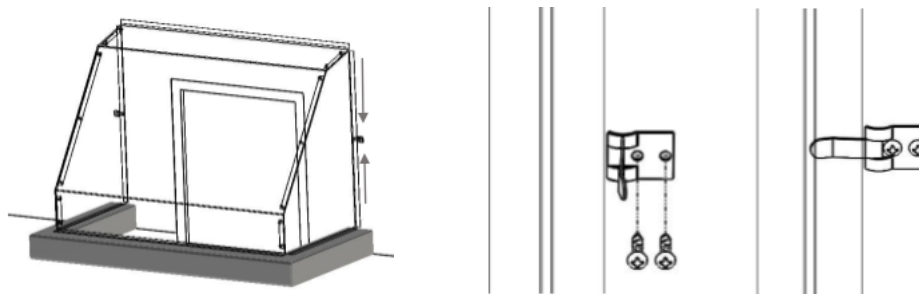

Step 3: Flip both quick-connect clips to the closed position.

Your window well atrium installation is now complete!

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.

REV A.1