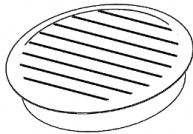


INSTALLATION INSTRUCTIONS

Cover Vent Installation Instructions

Included in Kit

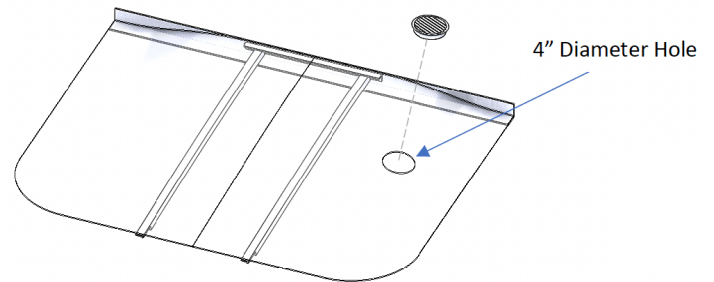
- Aluminum cover vent(s)

**What You'll Need**

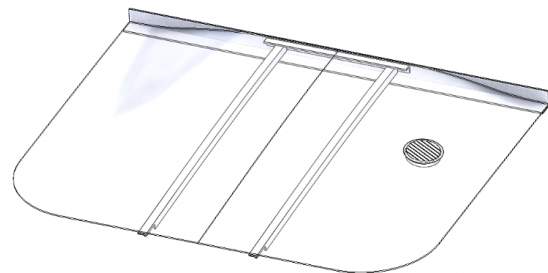
- Drill with 4" hole saw

**Installation****STEP 1:**

Drill a 4" hole through the polycarbonate in the desired vent location.

**STEP 2:**

Snap the vent into the hole until the vent flange is flush with the top of the cover.

**Your cover vent installation is now complete!**

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.

REV A.0