


INSTALLATION INSTRUCTIONS


Polycarbonate Window Well Cover Installation

For concrete/brick, wood/timber and composite wells.

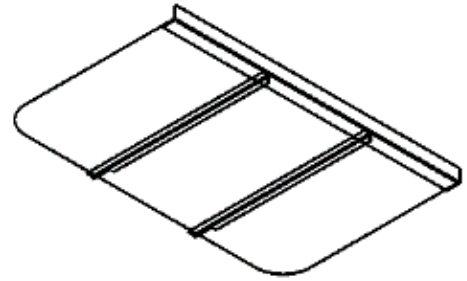

NOTE: To prevent damage during installation, do not remove the protective film from the cover until installation is complete. Returns cannot be accepted once the protective film has been removed.

Included in Kit

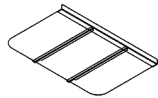

Cover assembly



#8 × 0.75" Phillips panhead screws



Hook & loop discs



Hook & loop squares



Masonry anchors

What You'll Need

- Drill with 3/16" bit
- Phillips screwdriver
- Permanent marker

For concrete/brick wells you will also need:


- 3/16" masonry drill bit
- Hammer

NOTE: In cooler climate conditions, the hook & loop adhesive and well cover should be brought to room temperature (above 67°F) for a minimum of 1 hour before application to achieve a secure bond.

Installation


STEP 1:

Position cover assembly over window well. Ensure that the cover assembly is centered on the window well and that the back of the assembly is snug against the house/building.

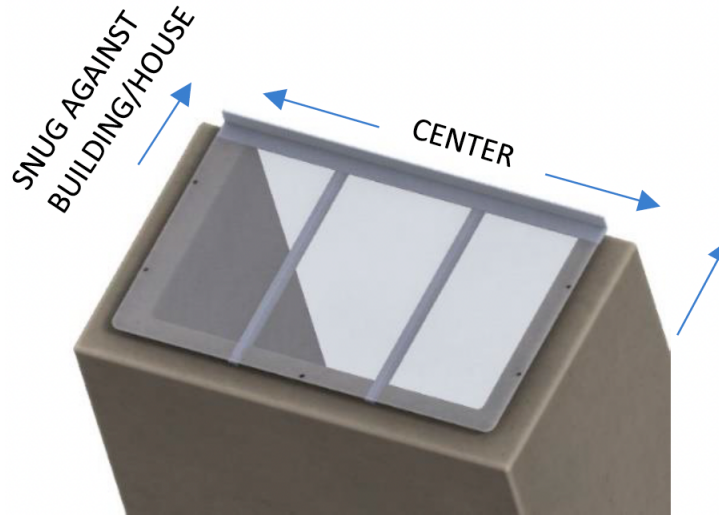


STEP 2:

Lift the cover slightly from the well and make a locating mark on the well for each corresponding hook & loop locating mark on the cover film (approximate hook & loop locations have been indicated on the protective film of the cover). Replace the cover on the well and trace the locating marks made on the well to the protective film on the top side of the cover to match the exact desired locations of hook & loop.

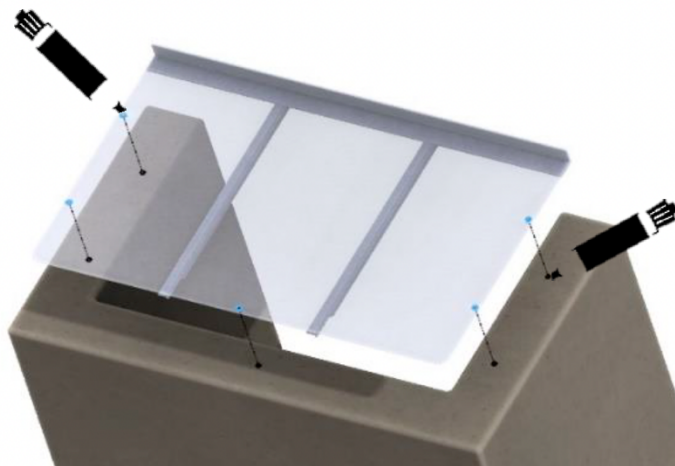


STEP 3:

Remove the cover from the well and set aside. For concrete and brick wells, use a drill with a 3/16" masonry bit to drill holes in the well at each locating mark made in STEP 2 to a depth of 1½"; use a hammer to tap in the anchors provided. For other well types, a standard 3/16" bit may be used; anchors are not needed.

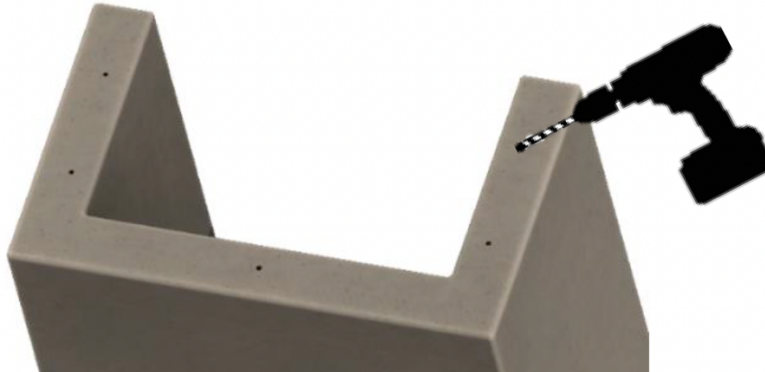

STEP 4:

At each hole location, attach a hook & loop disc to the concrete well using the #8-32 × 0.375" Phillips pan head screws provided.

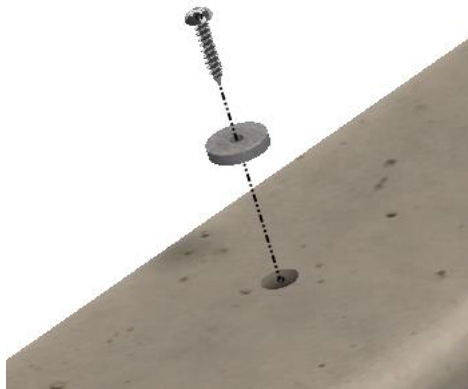

STEP 5:

Remove the backing from a hook & loop square, align the square with the locating mark on the top side of the cover, and secure it to the bottom side of the cover using firm, even pressure. Repeat for each locating mark.



STEP 6:

Align the cover-side hook and loop to the well-side hook and loop and secure the cover to the well by applying firm pressure at each hook and loop location. Carefully remove the protective film from the top side of the cover and discard. Protective film must be removed shortly after installation to prevent permanent adhesion to the cover.



NOTE: In cooler climate conditions, the adhesive should be allowed to cure at room temperature (above 67°F) for a minimum of 1 hour before attempting to disengage the hook and loop mate. Premature disengagement may cause a weakened adhesion bond or bond failure.

Your window well cover installation is now complete!

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.

REV A.2