

INSTALLATION INSTRUCTIONS

Screw Mount Back Panel Installation Instructions

Standard & With Quick-Release Clips

NOTE: To prevent damage during installation, do not remove the protective film from the cover until installation is complete. Returns cannot be accepted once the protective film has been removed.

Included in Kit

Cover assembly



Philips panhead screws



Back panel

With the quick-release clips version, also included:

Cover assembly



#8 × 0.75" Philips sheet metal screws



Back panel



Quick-release clips

What You'll Need

Phillips screwdriver

For installation to concrete or brick, you will also need:

Drill



Hammer




3/16" masonry drill bit

Installation


STEP 1:

Remove all panhead screws from the back bar and set aside.

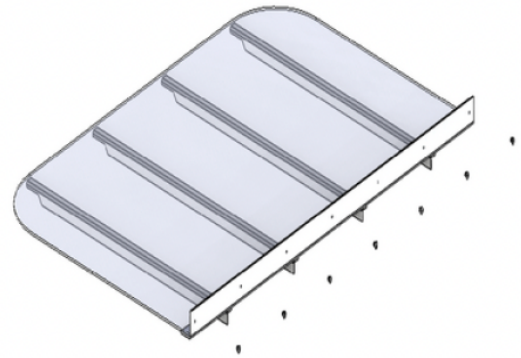


STEP 2:

Align the left side “L” and right side “R” of the back panel with the left side “L” and right side “R” of the well cover.

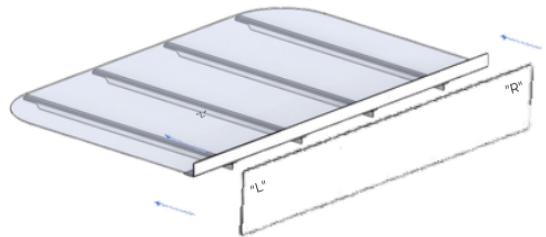

STEP 3:

Align the slots in the back panel with the holes in the back bar and secure with the screws from STEP 1.

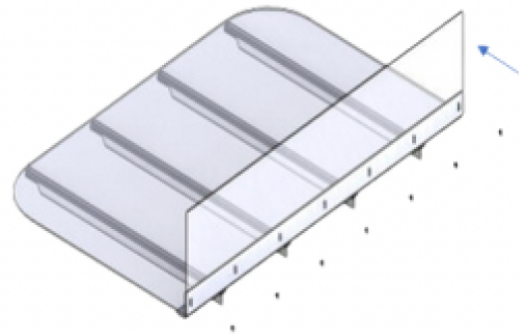

STEP 4:

Continue with Window Well Cover installation. (See separate installation instructions.)


Adding Quick-Release Clips

Complete this section only if your kit includes quick-release clips.

Note: STEP 4 must be completed before adding the quick-release clips.

STEP 5:

Quick-release clips are provided to secure the back panel to the house. Flip the quick-release clips to the open position and align with the side of the back panel. Mark both clip hole locations and use the screws provided to attach the clip to the house. Repeat clip installation on the opposite side. Once the clips are installed, flip the quick-release clips to the closed position.

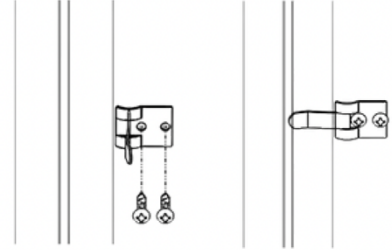

Note: If assembling the quick-release clips to concrete or brick, use a 3/16" masonry bit to drill each clip hole to a 1½" depth. Use a hammer to insert the masonry anchors provided, then screw the clips into the anchors in the concrete/brick.

Your back panel installation is now complete!

For questions, please call Window Well Supply Customer Service, Monday through Friday, 8:00 AM – 5:00 PM CST at (262) 633-3707.